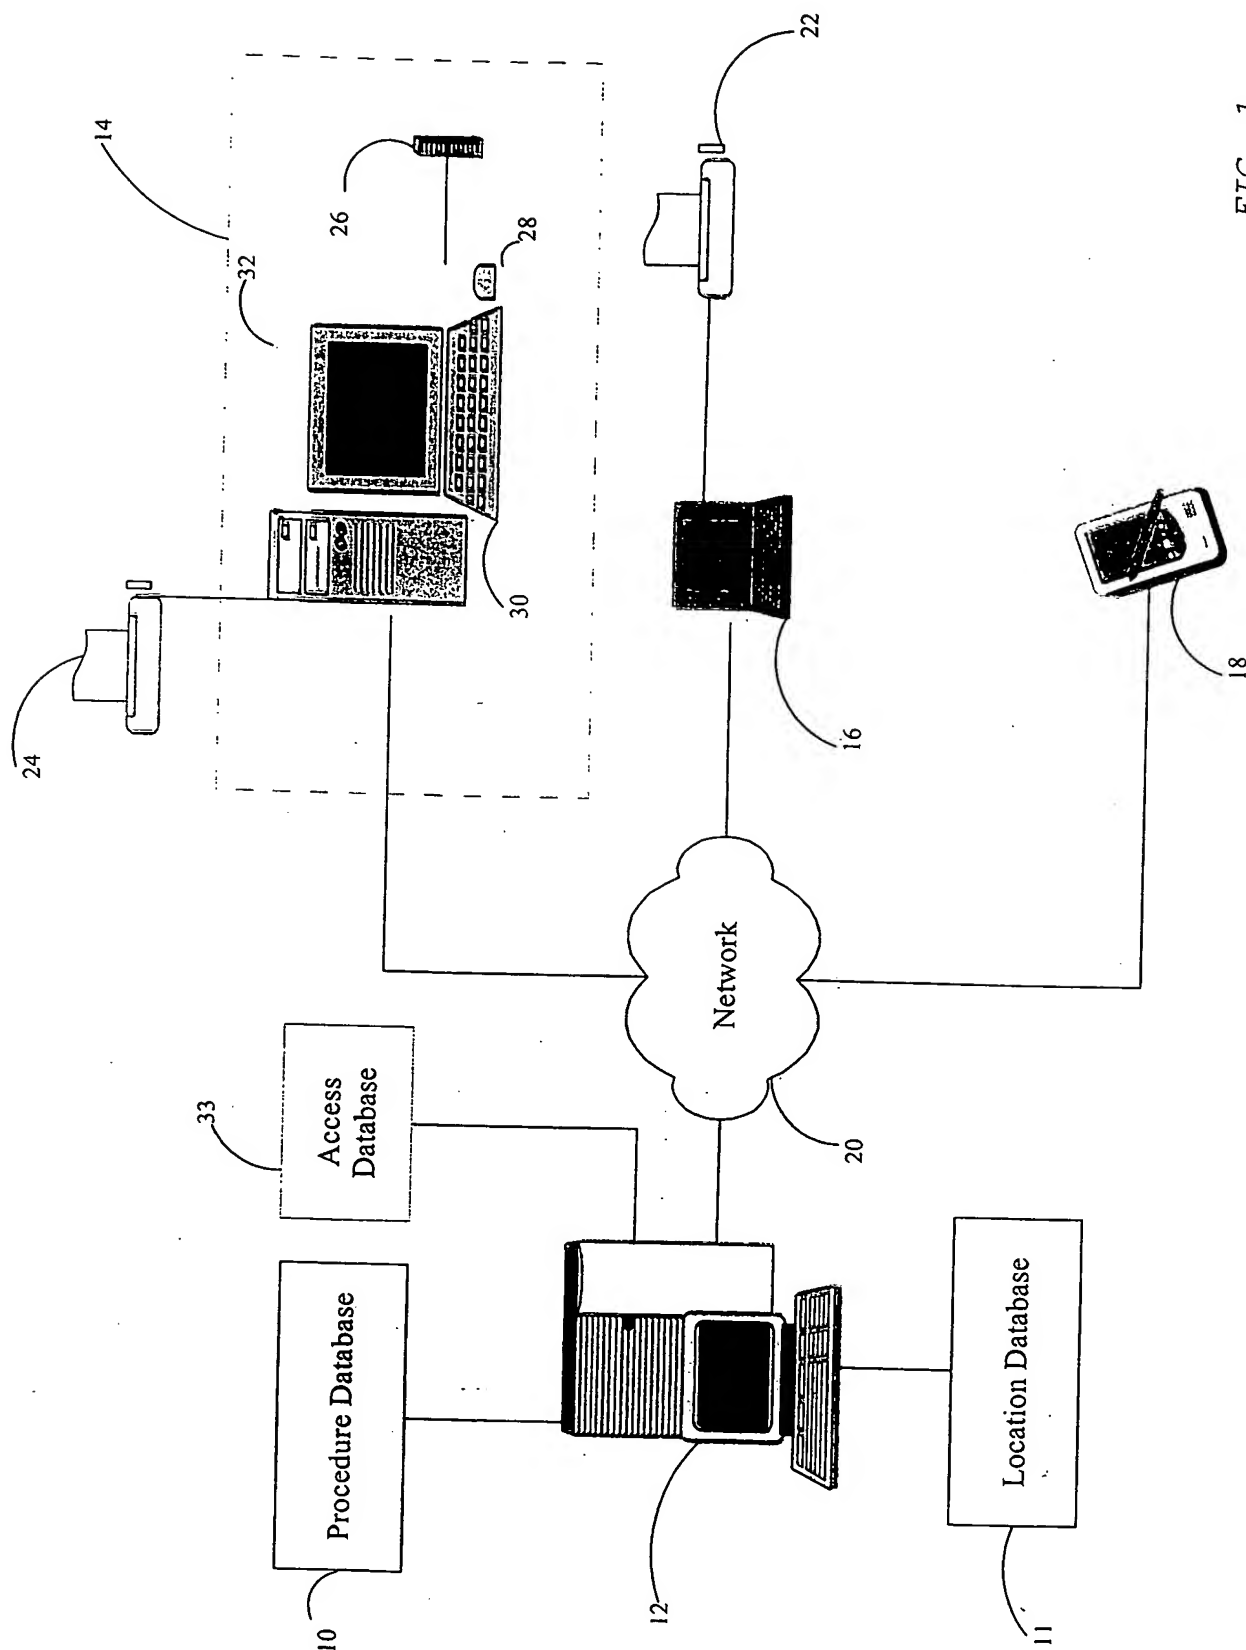


BEST AVAILABLE COPY

Express Mail
EV 337812116 US

FIG. 1



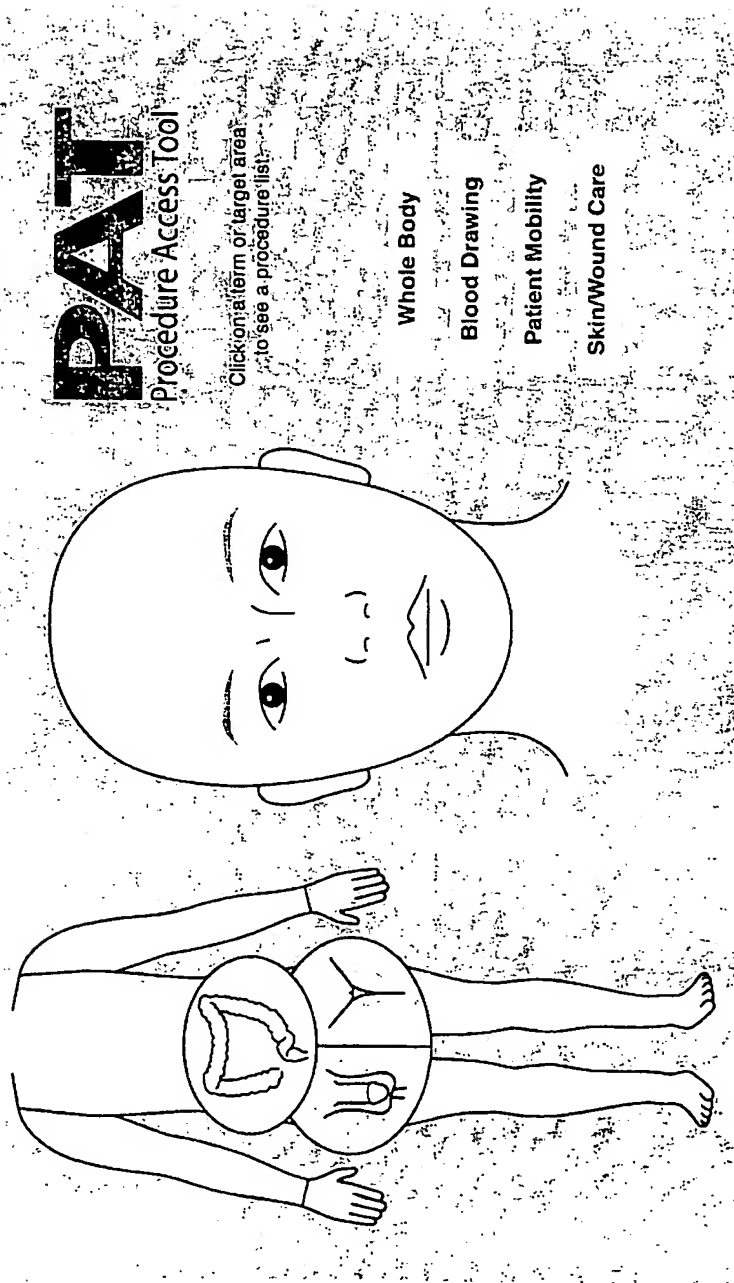


FIG. 2

Changing Central Line Dressing

Remove Old Dressing

- 1 Prepare:
 - Check iodine allergies
 - Wash hands
 - Put on mask from kit
 - Put on clean gloves
 - Lay patient as flat as tolerated

- 2 Carefully lift dressing from edges toward center




- 3 Inspect:
 - Catheter - No kinks or leaks
 - Site - No erythema, edema, drainage, or skin reactions

IMPORTANT: Notify physician of any complications after dressing change

Clean Site

- 1 Put on sterile gloves from kit

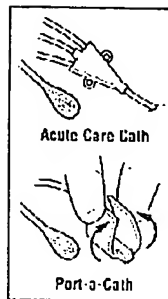

- 2 Use drape to lift catheter



Alcohol x 3

- 3 Clean site with all three alcohol swabs:
 - Start at insertion point and work outward, cleaning catheter as you go
 - Air dry



Iodine x 3

- 4 Scrub site with all three povidone-iodine swabs:
 - Scrub at insertion point 30 seconds
 - Work outward in a circular motion 30 seconds, scrubbing catheter as you go
 - Air dry 1-2 minutes or longer

Apply New Dressing

- 2 Cover site and catheter hub with two gauze pads

OPTIONAL: Paint area around gauze pads with tincture of benzoin swab



- 3 Trim hypafix dressing 1" larger than gauze. Apply dressing.

- 4 Anchor catheter securely with tape. Label with date, time and initials

IMPORTANT: Notify physician of any complications after dressing change

FIG. 3

FIG. 4

